



Ordering Information

① 吸盘直径 Pad dia.(mm)

02	ø2
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

② 吸盘类型 Pad type

对应吸盘直径 Applicable pad dia.	ø2	ø4	ø6	ø8	ø10	ø13	ø16	ø20	ø25	ø32	ø40	ø50
U 平形 Flat	●	●	●	●	●	●	●	●	●	●	●	●
C 平形带肋 Flat with ribs					●	●	●	●	●	●	●	●
D 深形 Deep					●			●	●		●	
B 风琴形 Bellows			●	●	●	●	●	●	●	●	●	●

③ 材料 Material

N	丁腈橡胶 NBR
S	硅橡胶 Silicon rubber
U	聚氨酯橡胶 Urethane rubber
F	氟化橡胶 Fluoro rubber

④ 真空口连接 Vacuum entry/Mounting thread diameter

连接 Connection	记号 Symbol	螺纹直径 Thread diameter	ø2-ø8	ø10-ø16	ø20-ø32	ø40,ø50
外螺纹 Male thread	A5	M5x0.8	●	●		
	A6	M6x1	●	●	●	●
	A8	M8x1			●	●
内螺纹 Female thread	B4	M4x0.7	●			
	B5	M5x0.8	●	●	●	
	B6	M6x1		●	●	●
	B8	M8x1.25			●	●
	B01	Rc1/8		●	●	●


适配器型号表示方法 How to Adapter Part Model

ZPT 1 - A5

⑥ 对应吸盘直径 Applicable pad dia.

1	ø2-ø8
2	ø10-ø16
3	ø20-ø32
4	ø40,ø50

How to Replace

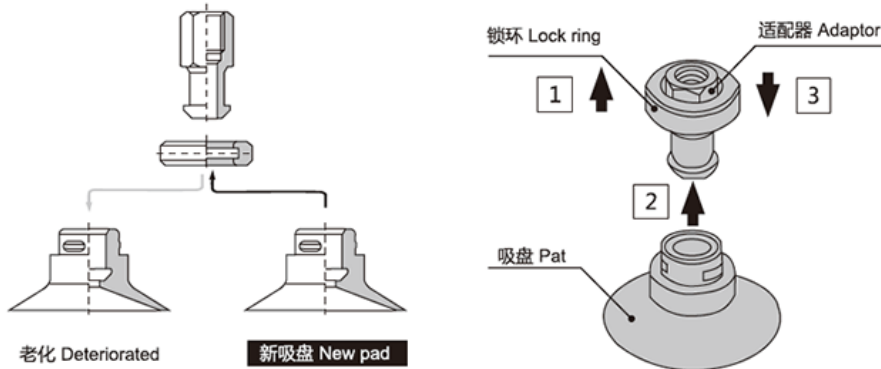


Since pads are essentially rubber, deterioration is unavoidable. The rate of deterioration depends upon factors such as conditions of use environment and temperature. Regular maintenance should be performed. If any damage, splitting, cracking or abrasion has occurred in a pad which appears to be harmful, replace it immediately. Also, take care not to damage the outside surface of the pad.

1. Pull the lock ring upward, and after lifting it to the adaptor, remove the old pad by pulling it downward.
2. While holding the lock ring in the raised position, place a new pad onto the adaptor.
3. Confirm that the pad is securely in place, and then return the lock ring to its original position.

Dimension

平形 Flat (U)
ø2,ø4,ø6,ø8

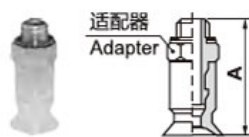

型号 Model	A	适配器 Adapter
ZPT02U□-A5	19	ZPT1-A5
ZPT02U□-A6	20	ZPT1-A6
ZPT04U□-A5	19	ZPT1-A5
ZPT04U□-A6	20	ZPT1-A6
ZPT06U□-A5	19	ZPT1-A5
ZPT06U□-A6	20	ZPT1-A6
ZPT08U□-A5	19	ZPT1-A5
ZPT08U□-A6	20	ZPT1-A6

适配器型号 Adapter part no.

六角对边

型号 Model	A	B
ZPT1-A5	M5x0.8	7
ZPT1-A6	M6x1.0	8

□ 吸盘材质 Material : 丁腈橡胶(N) NBR、硅橡胶(S) Silicon rubber