






PHOTOTRANSISTORS FT11, FT13

FLAME SENSORS FOR OIL OR BIOMASS BURNERS

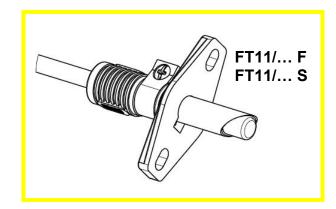

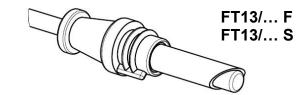

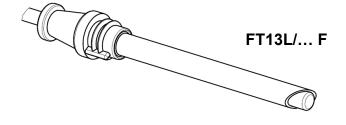

Introduction

Flame detection in oil burners occurs by means of sensors detecting the presence of flame through an electrical signal, which can be used by ignition and control devices.

FT use a phototransistor to detect the light generated by the flame and are in compliance with the directive RoHS 2011/65/EU and the delegated directive 2015/863EU known as RoHS III.

Description

These sensors, originally used for detecting the flame generated by oil burners, are also suitable for biomass burners (pellets, wood, seeds, etc). The sensing element changes its current according to the incident light and this property is exploited to detect the presence of flame in the burner.

Brahma phototransistors are available in two models, FT11 and FT13, which are distinguished by a different case.

A FT13L was created to expand this product portfolio: is equal to FT13 only has neck longer.

These sensors are designed to be coupled to Brahma control units and have been developed to replace previous photocells FC. For compatibility please refer to Table 3 and to the wiring diagrams. FT can be used with other controllers after a mandatory test of suitability.

The connection cable has a standard length of 620mm, the operating temperature range must be strictly between -20°C and + 70 ° C and the maximum operating voltage is +12Vdc.

Sensitivity

The sensitivity is within the range 300-750 nm, including thus the spectrum of visible light.

It is the installer's responsibility to place the phototransistor in a suitable and noise-free ambient light.

Given the many applications in which this sensor can be used it was thought to realize it with three different degrees of sensitivity, identified by the casing color: green for low sensitivity, red for medium sensitivity and blue for high sensitivity.

27754 08 1/4



To connect FT11 - FT13 to controllers not made by Brahma

refer to the data of Table 1 and verify the suitability.

, , , , , , , , , , , , , , , , , , ,										
Sensitivity		Low			Medium			High		
Colour		GREEN			RED			BLUE		
		Current [µA]			Current [µA]			Current [µA]		
V_{DC}	Lux	Min	Тур	Max	Min	Тур	Max	Min	Тур	Max
5	0	0	0	0.05	19	20	21	37	38	39
	3	5	9	10	25	29	31	43	47	49
	10	18	30	34	38	50	55	56	68	73
10	0	0	0	0.05	39	40	41	75	76	77
	3	5	9	10	45	49	51	81	85	87
	10	18	30	34	58	70	75	93	106	111
Measurements performed at 25°C.										

Table 1

NOTE: Possible customizations of the output current are available according to customer's requirements.

Flame detection

Both FT11 and FT13 can see the flame from different view. The Front and the Side view includes a protective cap for the sensor. Possible realizations are:

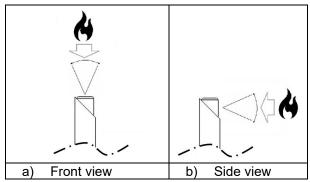


Table 2

Installation

As the phototransistor is polarized it is important to connect the light blue wire to the neutral of the control unit.


For a correct phototransistor-to-device coupling please refer to Table 2 below, to the technical documentation of the devices using these sensors and to the wiring diagrams.

Brahma control units that can be coupled to FT sensors
EUROOIL: VM440 / VM450
DIGITAL MICROFLAT "N": NDMxx and DMNxx
KOMPACT SERIES: TGRx (analog) and TGRDxx (digital)
OIL-SYSTEM SERIES: OS1 OS2
EUROOIL S10:
GR1 GR1/Z GR2
OR1 OR1/Z OR2 OR3/B
DIGITAL EURO-OIL: DR1 / DR2
EURO-OIL: BTO
= 1.1 6

Table 3


For the use of the FT with other control units not manufactured by Brahma it is necessary to make a verification of suitability.

Overall dimensions (mm)

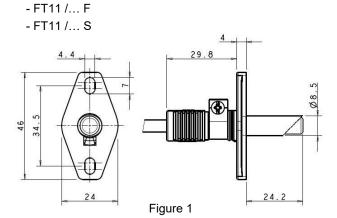


- FT13 /... F



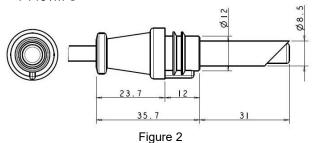


Only with front view is available FT13L: this fit in burner with the flame far away from the hole of insertion of phototransistor. See realization in figure 3

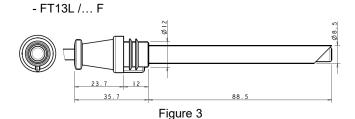

Note: to remove FT from its burning position pull always from the sleeve / housing and never from the cable.

Drilling plane for FT11 and FT13

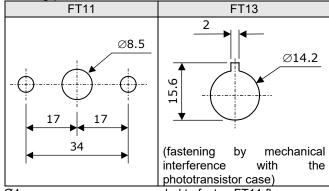


Ø4mm screws are recommended to fasten FT11 flame sensors.




WIRING DIAGRAMS

EURO-OIL SERIES

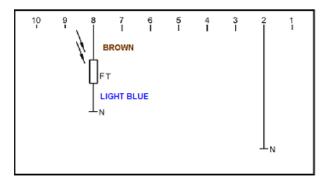


TYPE VM440 VM450

DIGITAL MICROFLAT "N" AND NEW DIGITAL MICROFLAT SERIES

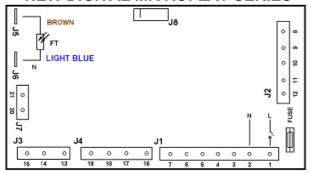


TYPE NDTMxxO DTMNxxO

KOMPACT SERIES (TGRx)

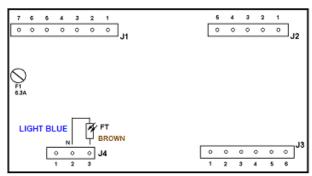


TYPE TGRx

KOMPACT SERIES (TGRD)

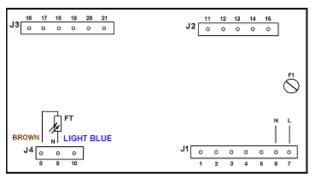


TYPE TGRD7x TGRD9x

EURO-OIL CONTROLS SERIES 10

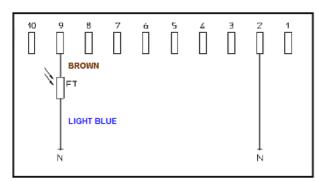


TYPE GR1 GR2 GR1/Z OR3/B

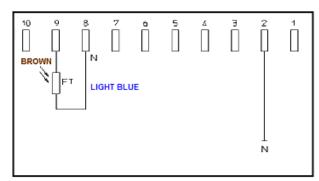


TYPE OR1 OR1/Z OR2

DIGITAL EURO-OIL CONTROLS

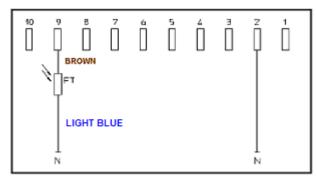

TYPE DR1 / DR2


EURO-OIL CONTROLS SERIES BT

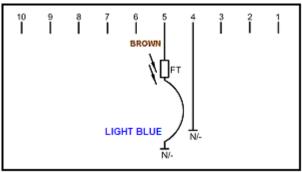


TYPE BT..O



Typical response

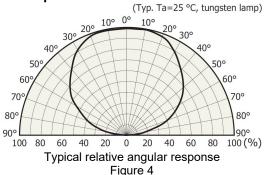

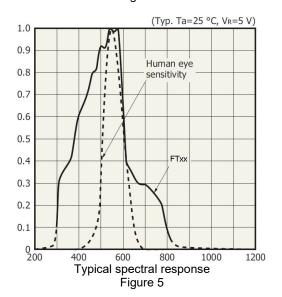

Part reference

Phototransistor FTX /Y Z MMjjj O

X 11: Phototransistor type FT11 (fig 1) 13: Phototransistor type FT13 (fig 2)

13L: Phototransistor type FT13L (fig 3) – Available

only with front view

Y Case color:

V: Green / Low sensitivity
R: Red / Medium sensitivity
A: Blue / High sensitivity

Z F: FT with front view (Tab.2 fig. a) **S:** FT with side view (Tab.2 fig. b)

jjj Cable length (mm)

Cable termination. See Table 4. Performing other finishes according to customer requirements

NOTES ABOUT PRODUCT DISPOSAL The device contains electronic components and cannot therefore be disposed of as normal household waste. For the disposal procedure, please refer to the local rules in force for special waste.

BRAHMA SpA

Via del Pontiere,31 37045 Legnago (VR) Tel. +39 0442 635211 – Telefax +39 0442 25683 http://www.brahma.it E – mail: brahma@brahma.it

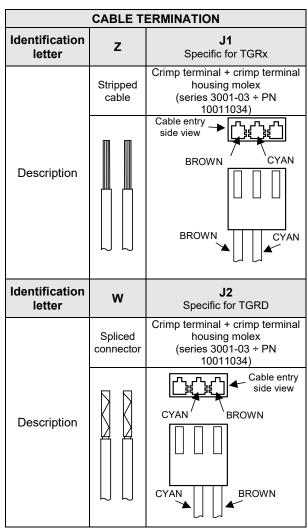


Table 4

Example:

• PHOTORANSISTOR FT11 /R F MM620 W

Phototransistor FT11 Phototransistor type FT11 Red case (medium sensitivity)

Front view

MM620 Cable length 620 mm W Spliced connector

PHOTORANSISTOR FT13 /V S MM620 Z Phototransistor FT13 Phototransistor type F

Phototransistor FT13 Phototransistor type FT13
V Green case (low sensitivity)

S Side view

MM620 Cable length 620 mm

Z Stripped

PHOTORANSISTOR FT13L /A F MM620 J1
Phototransistor FT13L Phototransistor type FT13
V Green case (low sensitivity)

Front view (F is the only

possible for FT13L)

MM620 Cable length 620 mm

J1 Cable termination type J1

ATTENTION -> Company Brahma S.p.A. takes no responsibility for any damage resulting from Customer tampering with the product.

22/04/2022 Subject to amendments without notice